

Advanced Solution for Sheet Metal Fabrication

Matt Thorn Autodesk

Learning Objectives

- Learn how to create materials and machine data for Nesting
- Learn how to bring in CAD Files into TruNest
- Learn how to create Orders
- Learn how to create nests, review nests and also verify Machine Code

Description

This class goes from start to finish to complete a sheet metal manufacturing workflow. We will start with importing the designs, utilizing material data, then perform an optimal nesting process, and finish with a CNC program to be used for manufacturing. Autodesk[®] TruNest provides an advanced and complete solution for sheet metal fabrication solution which supports water jet, plasma, laser cutters as well as routers and punch presses.

Your AU Experts

Matt Thorn is a SQA Engineer at Autodesk. Matt received his BS in Mechanical Engineering and Mathematics from Rutgers University and Stockton University respectively after completing a five year Dual Degree program. He began his expertise in Advanced Manufacturing with Magestic Systems Inc. which was then acquired by Autodesk in July 2014. Matt has been teaching and advising companies around the world on how to optimize their nesting, laser projection, and manufacturing processes for over 2 years.

Michael Jay Spellman – As part of the recent acquisition of Magestic Systems, Mike is currently serving as Director of software Development for the Composites and Fabrication team in the Advanced Manufacturing group. Prior to his current role, Mike served as CTO of Magestic and was one of the two Original founders, were he helped Design, Develop and Architect automated Nesting, Laser Projection and AFP/ATL systems for some of the largest companies in the world such as Boeing, Lockheed Martin, GE Transportation, Airbus, covering Various industries such as Aerospace, Automotive, Heavy Equipment, and more. With a background in computer science, electrical engineering and mathematics from Polytechnic University of New York



Introduction

Nesting

What is nesting? Nesting is the optimization process of trying to fit a small object or objects inside a larger one. Nesting for manufacturing involves fitting as many parts, pieces, or plies (small objects) into the given material constraints (larger objects).



FIGURE 1: EXAMPLE OF A NEST USED IN MANUFACTURING

Why is nesting important? The nesting process drives the production of parts and assemblies on the shop floor. The nesting system knows how much material will be consumed and left over to make a product.

TruNest User Interface

Tree

The Tree serves as the main entry to every workspace within TruNest. Each node in the tree indicates how many other nodes are underneath it. Clicking a node in the tree will open that workspace. You can open multiple workspaces at a time by using the center mouse button when clicking a node in the tree. If you use a standard left click, it will replace the current workspace with the workspace chosen in the tree. Some of the nodes, like the Nests node, are automatically populated based on certain criteria within the system. The tree has a search feature that will automatically expand the nodes in the tree that match the search criteria. It also has a refresh option in case something within the configuration has changed and the tree needs to be updated.



FIGURE 2: ADMIN LEVEL EXPANDED TREE (SPLIT INTO 3 PIECES)

Ribbon

The ribbon is another navigation tool within TruNest. The ribbon has more specific options to choose from that are easily accessible, rather than trying to find the correct node in the tree. One distinct difference about the ribbon is that each button opens up a separate workspace instead of overwriting the currently selected workspace.



FIGURE 3: ADMIN LEVEL RIBBON TASK SET

Workspaces

Workspaces are the main action areas of the interface. There are various different types of workspaces that each serve a specific purpose in TruNest. Some serve specific purposes like the Order Entry workspace and the Schedule Orders workspace. These two workspaces are highly customized to easily allow the user to queue parts and schedule them for nesting. There are also three general types that you will see heavily used within TruNest.

Grid Workspace

The grid workspace allows the user to view a table within the TruNest database. There are several tool bar options that allow the user to copy, past, insert, and delete current records in the table. There is also support to import and export data to and from specific formats. Inside of the grid, you can also filter columns by specific criteria. This can also be used in conjunction with the grouping mechanism which groups the whole table by one or more columns. If a table has many columns that do not fit on the screen, you can also lock or freeze columns. This feature keeps important columns in view when you scroll the table. Lastly, you can resort columns to see information side by side for comparison.

Viewport Workspace

The viewport workspace allows the user to view part files in 3D. In this workspace the user can fully inspect the geometry with the tools given in the tool bar. There are entity, shape, and part inspection options that bring up a contextual menu that updates based on what geometry is selected. This will give the user information about what layer, color, and line style the selected



geometry is on. It will also allow the user to see information about area, perimeter, and center of gravity. There is also a measuring option for inspection purposes.

Action Workspace

The action workspace allows the user to launch specific processes based on the contents of a table. This workspace is similar to the grid workspace, but with action buttons on the right-hand side. This workspace is commonly used for nesting and part import functions.

Users, Groups, and Logins

TruNest has a user authentication system. Each user inside of TruNest has a certain amount of privileges depending on what group they are assigned to. A user in the admin group typically has access to all types of workspaces, read and write access, and user tasks. Other groups, like engineering, may only have access to user tasks like part importing and order entry. Each user and group assignment is fully customizable in regards to what the user can access, change, and see within the environment. If a user is assigned to multiple types of groups, the user can seamlessly change between the different groups using the profile dropdown menu.



FIGURE 4: USER PROFILE MENU

Utilizing Material Data and Machine Management

Inventory Management

The Inventory management feature tracks materials, inventory IDs, remnant IDs, and other inventory information. The information you set up here automatically prefills many of the part, order, and nesting data needed to schedule and cut parts within TruNest. In Figure, the table shows the different inventory available. The material and inventory ID allows the system to track like material types of varying sizes. The remnant ID allows the system to track pieces of material that are left over from the cutting process to potentially be used again by nesting.



1				TruNe	st Contour										-	×
File Admin Tasks Configuration	Manag	jer Database Mana	ager File Transla	tion Part Re	view/Modifi	ication	Machine Man	agement	Optimizer	s Scheduli	ng Nest	Generation	Review Ne	sts ^		2 ~ 📀
Automatic Inventory Nesting Pa Translation Defaults Assembly Administrative	art y Revie Task Si	Order Schedule w Entry Orders I	Nest Review													
Navigation T	Work	spaces			_			_			_					
Search		inventory														
▷-			⊘. ∎													
▲ S Database Manager (9)		= == == == == =	6 6 1 9 1	<u> </u>												
- 🖧 Part Assembly	Dra	ag a column header and dro		at column												
— 📚 Nesting Defaults		Material	T Inventory_ID T	Remnant_ID T	Length T	Width T	Quantity T	Cost T	RemEdge T	Comment T	LeftTrim T	TopTrim T	RightTrim T	BottomTrim T	Clam	oSizi 🔒
 Inventory 	Þ	12GA STAINLESS	•		120.0000	60.0000	9999	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000	<u>о</u>
- 🗡 Auto Leadin Data		12GA STAINLESS	96X288		288.0000	96.0000	9999	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000	0
- J Clamps		14GA STAINLESS	-		120.0000	60.0000	9999	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000	0
D State S		14GA STAINLESS	96X288		288.0000	96.0000	9999	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000	0
Þ− 🗧 Admin Manager (11)		A36 1	-		165.0000	96.0000	10454	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000	0
Determination of the second		A36 1			240.0000	96.0000	10457	1.0000	STRAIGHT		0.0000	0.0000	0.0000	0.0000	0.000	0
P− S Additional Tables (44)		A36 1	3		60.0000	96.0000	10457	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000	0
P art Import (5)		A36 1	5		125.0000	96.0000	10457	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000	b
D G Norte (2)		A36 1	96X240		240.0000	96.0000	10457	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000	0
V de Nesis (2)		A36 1	96X360		360.0000	96.0000	10457	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000	0
		A36 1	96X480		480.0000	96.0000	10457	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000)
		A36 1 1/2	-		35.0000	96.0000	10254	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000	0
		A36 1 1/2			240.0000	96.0000	10249	1.0000	STRAIGHT		0.0000	0.0000	0.0000	0.0000	0.000	0
		A36 1 1/2			240.0000	36.0000	10249	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000	0
		A36 1 1/2	96X240		240.0000	96.0000	10249	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000	ò
		A36 1 1/2	96X288		288.0000	96.0000	10249	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000	0
		A36 1 1/2	96X360		360.0000	96.0000	10249	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000	0
		A36 1 1/4	-		32.0000	57.0000	10357	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000	0
		A36 1 1/4			14.0000	44.0000	10353	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000	0
		A36 1 1/4			33.0000	81.0000	10350	1.0000	STAIRED		0.0000	0.0000	0.0000	0.0000	0.000	0
		A36 1 1/4			240.0000	96.0000	10351	0.0000	STRAIGHT		0.0000	0.0000	0.0000	0.0000	0.000	0
		A36 1 1/4	4		240.0000	96.0000	3	0.0000	STRAIGHT		0.0000	0.0000	0.0000	0.0000	0.000	0
	Tota	al Records: 68 Selec	ted Records: 1 0	urrent Record: 1	Table: in	vman F	lter: <none></none>	Can E	dit: True Ca	n Insert: True	Can Delete	:: True				
							in the second se	, and			Derett					

FIGURE 5: INVENTORY WORKSPACE

Nest Default Management

The Nest Default management table looks at the material from a nesting and machining perspective. It contains parameters like material thickness, separation of parts, nesting frame, and grain constraints. The nesting process uses these parameters to optimize part placement for the machine. Depending on the machine configuration, the nesting defaults vary greatly.



1					TruNest Contou	r - Nesting	Defaults								- 1	⊐ ×
File Admin Tasks Configuration I	Manag	jer Database Ma	anager File	e Translati	ion Part Re	view/Modif	ication	Machine Managemen	t Optimizers	Scheduling	Nest Ge	eneration Rev	iew Nests	^	ta 上 :	0
Automatic Inventory Nesting Pa Translation Paults Assembly Administrative	irt y Revie Task S	Order Schedule w Entry Orders et	2 Nest Review													
Navigation 🔻 📮	Work	spaces														
Search	8	Nesting Defaults												, <u> </u>		
Þ− 🖬 Utilities (4)				- 3 →												
🖌 🛢 Database Manager (9)																
— 🝰 Part Assembly	Dra	ig a column header and	drop it here to gr	oup by that	column											
Resting Defaults		Material T	Thickness T	Kerf T	Separation T	Pierce T	Frame T	Machine T	PlateSelection T	MinTime T	MaxTime T	RemnantUtil T	PlateUtil T	Density T	CutSp 1	ĥ
- Inventory		12GA STAINLESS	0.1090	0.1250	0.5000	0.2500	0.5000	PLASMA-ESAB	AsListed	2000	3000	75	80	1.1250	175	
للم Auto Leadin Data		12GA STAINLESS	0.1090	0.1250	0.5000	0.2500	0.5000	PLASMA-FARLEY-1	AsListed	2000	3000	75	80	1.1250	175	
Clamps		12GA STAINLESS	0.1090	0.1250	0.5000	0.2500	0.5000	PLASMA-LTEC	AsListed	2000	3000	75	80	1.1250	175	
▷-		12GA STAINLESS	0.1090	0.1250	0.5000	0.2500	0.5000	PLASMA-MG	AsListed	2000	3000	75	80	1.1250	175	
Þ- 🗧 Admin Manager (11)		12GA STAINLESS	0.1090	0.1250	0.5000	0.2500	0.5000	PLASMA-MG-2	AsListed	2000	3000	75	80	1.1250	175	
D- Optimizer Manager (6)		12GA STAINLESS	0.1090	0.1250	0.5000	0.2500	0.5000	PLASMA-MG-S	AsListed	2000	3000	75	80	1.1250	175	
P− S Additional Tables (44)		12GA STAINLESS	0.1090	0.0100	0.5000	0.2000	0.5000	TANAKA2	AsListed	2000	3000	75	80	1.1250	175	
P a Part Import (5)		14GA STAINLESS	0.0780	0.1250	0.5000	0.2500	0.5000	PLASMA-ESAB	AsListed	2000	3000	75	80	1.1250	45	
D G North (2)		14GA STAINLESS	0.0780	0.1250	0.5000	0.2500	0.5000	PLASMA-FARLEY-1	AsListed	2000	3000	75	80	1.1250	45	
V ⁻ ³ ² Nesis (2)		14GA STAINLESS	0.0780	0.0400	0.5000	0.2500	0.5000	PLASMA-LTEC	AsListed	2000	3000	75	80	1.1250	45	
		14GA STAINLESS	0.0780	0.1250	0.5000	0.2500	0.5000	PLASMA-MG	AsListed	2000	3000	75	80	1.1250	45	
		14GA STAINLESS	0.0780	0.1250	0.5000	0.2500	0.5000	PLASMA-MG-2	AsListed	2000	3000	75	80	1.1250	45	
		14GA STAINLESS	0.0780	0.1250	0.5000	0.2500	0.5000	PLASMA-MG-S	AsListed	2000	3000	75	80	1.1250	45	
		14GA STAINLESS	0.0780	0.0100	0.5000	0.2000	0.5000	TANAKA2	AsListed	2000	3000	75	80	1.1250	45	
		A36 1	1.0000	0.1250	0.5000	0.2500	0.5000	PLASMA-ESAB	AsListed	2000	3000	75	80	1.1250	45	
		A36 1	1.0000	0.1250	0.5000	0.2500	0.5000	PLASMA-FARLEY-1	AsListed	2000	3000	75	80	1.1250	45	
		A36 1	1.0000	0.1900	0.5000	0.2500	0.5000	PLASMA-LTEC	AsListed	2000	3000	75	80	1.1250	45	
		A36 1	1.0000	0.1250	0.5000	0.2500	0.5000	PLASMA-MG	AsListed	2000	3000	75	80	1.1250	45	
		A36 1	1.0000	0.1250	0.5000	0.2500	0.5000	PLASMA-MG-2	AsListed	2000	3000	75	80	1.1250	45	
		A36 1	1.0000	0.1250	0.5000	0.2500	0.5000	PLASMA-MG-S	AsListed	2000	3000	75	80	1.1250	45	
		A36 1	1.0000	0.0300	0.5000	0.2000	0.5000	TANAKA2	AsListed	2000	3000	75	80	1.1250	45	
		A36 1 1/2	1.5000	0.0800	0.5000	0.2500	0.5000	GAS-ESAB	AsListed	2000	3000			1.1250		
	Tot	al Records: 96 Sel	lected Records	:1 Cu	rrent Record: 1	Table: n	estdflt E	ilter: <none> Can</none>	Edit: True Can I	nsert: True	Can Delete:]	[rue				
		Jei Jei	contras.			- moves th		- Can	Carrie Carri							

FIGURE 6: NEST DEFAULT WORKSPACE

Machine Management

Under the Machine Management node in the tree, there are various tabs that define the critical components of the machine configuration. Depending on whether you have a punch, router, laser, etc., this machine configuration will reflect the necessities in tooling information and machine settings to support that machine type.

Tool Defaults

The tool defaults table contains information about each tool in regards to the CNC process. On a punch or router machine, each punch tool or router head is going to have a unique default that defines how the tool can be used by the machine. This table defines parameters like tool priority, cut speeds, rapid speeds, and which materials each tool can be used on.

Tool Library

The tool library table contains information about the design of the tool. It defines parameters like tool size, tool wear, machine range, and tooling pre-stations. This information allows the post processor to classify which tool is best for the parts it is trying to manufacture.



Machine Settings

The machine settings table associates the tools defined in the library to a specific station on the machine. It also allows the user to define the range of the tool and any potential offsets the tool may have.

Machine Info

The machine info table describes the characteristics of the machine to the nesting system. An important parameter in this table is the workable area of the machine. This area defines the maximum length and width of material that can be processed by that machine.

1	TruNest Contour - Machine Settings - X																	
File	Admin Tasks	Configuration M	Manag	jer Database I	Manager File Ti	ranslation P	art Review/I	Modification	Machine M	anagement	e Optimiz	ers Scheduling	Nest Gen	eration	Review N	ests	^ [a 💵 🛛 🔞
Autom Transla	atic Inventory Net tion Def	sting Pa faults Assembly Administrative 1	rt / Revie Task S	Order Sched ew Entry Orde	ule Nest rs Review													
Navigat	tion		Work	spaces														
20	Scarch_																	
Þ- 🗖	□ Utilities (4) □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □																	
⊿- ≘	Database Manager	(9)																
	🐣 Part Assembly		Dra	ig a column header ai	id drop it here to group	by that column												
	📚 Nesting Default	ts	-	Machine T	Station_Name T	ToolIdentity T	Status T	LowRange T	HiRange T	Heads T	Spacing T	Station_Description T	MinX Y	MinY T	MaxX T	MaxY T	Xoffset 1	Yoffset
	Inventory			GAS-ESAB	GAS	GAS		А	Z	4		OXY FUEL GAS	0.0000	0.0000	720.0000	160.0000	0.0000	0.0000
	Auto Leadin Da	ta		GAS-FARLEY	T04	GAS		A				8.76;0;2;2;2	0.0000	0.0000	500.0000	161.4380	0.0000	0.0000
	Clamps			GAS-FARLEY	T61	D1.625		D		1		8.76;0;2;2;2	0.0000	0.0000	500.0000	161.4380	0.0000	0.0000
4	Machine Manag	gement (7)		GAS-FARLEY	T62	D1.188		D			-	8.76;0;2;2;2	0.0000	0.0000	500.0000	161.4380	0.0000	0.0000
	Tooling Libr	rary		GAS-FARLEY	T63	D.5		D				8.76;0;2;2;2	0.0000	0.0000	500.0000	161.4380	0.0000	0.0000
	- Z Tooling Det	aults		GAS-FARLEY	T65	D1.813		D		1	-	8.76;0;2;2;2	0.0000	0.0000	500.0000	161.4380	0.0000	0.0000
	Machine Lis	а -		GAS-FARLEY	T66	D1.313		D			-	8.76;0;2;2;2	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
	King Machine Set	ttings		GAS-FARLEY	T67	D1.25		D		1	-	8.76;0;2;2;2	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
	- 🌣 Machine Gr	oups		GAS-FARLEY	T68	D1.5		D	Z	1	-	8.76;0;2;2;2	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
	A Facility	oups		GAS-FARLEY	T69	D1.062		A			-	8.76;0;2;2;2	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
Þ	Admin Manage	r (11)		GAS-FARLEY	771	D.688		A		1	-		0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
⊳	Optimizer Mana	ager (6)		GAS-FARLEY	T72	DTAP .625-11		A		1	-		0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
Þ	Additional Table	es (44)		GAS-FARLEY	180	D2.125		A			-	D1	0.0000	0.0000	0.0000	0.0000	0.0000	0.0000
⊳– ≝ _≠	Part Import (5)			GAS-FARLEY-1	104	GAS		A .	Z –	5	× -	8.76;0;2;2;2	0.0000	0.0000	500.0000	161.4380	0.0000	0.0000
▶- ■	Orders (3)			GAS-FARLEY-1	160=1	DI		D	2	1	-	8.76;0;2;2;2	0.0000	0.0000	500.0000	161.4380	0.0000	0.0000
⊳– JrL	Nests (2)			GAS-FARLEY-1	160=10	D.813		D	2		-	8.70;0;2;2;2	0.0000	0.0000	500.0000	161.4380	0.0000	0.0000
				GAS-FARLEY-1	160=11	D4 635		D	2	1	-	8.70;0;2;2;2	0.0000	0.0000	500.0000	161.4380	0.0000	0.0000
				GAS-FARLEY-1	160=12	D1.625		D	2	1	-	8.76;0;2;2;2	0.0000	0.0000	500.0000	161.4380	0.0000	0.0000
				GAS-FARLEY-1	T60 14	0.8/5		0	2			8.70,0,2,2,2	0.0000	0.0000	500.0000	161.4380	0.0000	0.0000
				GAS-FARLEY-1	T60-15	D.028		0	7	1		876,0,2,2,2	0.0000	0.0000	500.0000	161 4290	0.0000	0.0000
				GAS-FARLEY-1	T60_16	0.938		0	2	1		8.70,0,2,2,2	0.0000	0.0000	500.0000	161.4380	0.0000	0.0000 -
			4.0	GAS-FARLEY-1	100=10	01.002		0	2	-		0.70,0,2,2,2	0.0000	0.0000	500.0000	101.4580	0.0000	▶
			Tota	al Records: 88 🕴	Selected Records: 1		rd: 1 Ta	ble: machtool1	Filter: <no< td=""><td>DNE> C</td><td>an Edit: True</td><td>Can Insert: True</td><td>an Delete:</td><td></td><td></td><td></td><td></td><td></td></no<>	DNE> C	an Edit: True	Can Insert: True	an Delete:					
			Tota	al Records: 88 🕴 🤅	elected Records: 1	Current Reco	rd:1 Ta	ble: machtool1	Filter: <no< td=""><td>ONE> C</td><td>an Edit: True</td><td>Can Insert: True C</td><td>an Delete:</td><td>True</td><td></td><td></td><td></td><td></td></no<>	ONE> C	an Edit: True	Can Insert: True C	an Delete:	True				

FIGURE 7: MACHINE MANAGEMENT WORKSPACES (MACHINE SETTINGS SHOWN)

Importing Designs

Translating Data

CAD data is one of the primary resources for the nesting system. Depending on the CAD system, the data be as minimal as a single geometry defining the part periphery or can be as complex as containing information about geometry, part name, material, assembly structure and even tooling information. This "input data" can even be legacy nest files or machine code. TruNest handles all of these different



data type through its universal translator. All of the functions of importing CAD data into TruNest can be found in the Part Import section of the tree.



FIGURE 8: TRUNEST TREE WITH PART IMPORT NODE EXPANDED

As you can see in **Figure 2**, there are a few different ways to import part information. The first option is Translate. Clicking Translate opens the Translate workspace where part files can be added into the window. Once they are added via one of the Select Files options, they will show up in the workspace table. The different options for selecting files indicate to TruNest where to put the results of the translation. The files will either end up in the base of the parts folder, one sub-directory level within the parts folder (Level 1), or two sub-directories within the parts folder (Level 2).



TruNest Contour - Translate	
File Admin Tasks Configuration Manager Database Manager File Translation Part Review/Modification Machine Management Op	mizers Scheduling Nest Generation Review Nests 🔹 🛧 📷 👤 😪 🤕
🖌 古 奎 🎄 👼 🎁 🖬	
Automatic Inventory Nesting Part Order Schedule Nest	
Administrative Task Set	
Navigation v 4 Workspaces	
Search_ Q Translate	
D	Actions
Database Manager (9)	
▲ * part Import (5)	Select Files
Drag a column header and drop it here to group by that column	Select Level 1 Files
Translate and Compress File T	📾 Select Level 2 Files
Automat Ct/ProgramDatal/Autodes/ATru/Nest12016/Contourt/Contourt/DemoPart1.dwg	TranslateCPD
- Automat and Compress C\ProgramData\Autodesk\TruNest\2016\Contour\Contour\Parts\DWG\DemoPart2.dwg	
CAProgramData\Autodesk\TruNest\2016\Contour\Contour\Parts\DWG\DemoPart3.dwg CAProgramData\Autodesk\TruNest\2016\Contour\Contour\Parts\DWG\DemoPart3.dwg	TranslateDXF
C:\ProgramData\Autodesk\TruNest\2016\Contour\Contour\Contour\Parts\DWG\DemoPart4.dwg	*, TranslateDWG
C:OprogramDatalAutodesk\TruNest2016\Contour/Contour/Parts\DWG\DemoPart5.dwg	*, TranslatelGES
C:ProgramData/suctodesk()runest_2010(Lontour/Contour/Parts/LWG/DemoRatto.dwg	- TenebtaTYT
ChProgramData/autodesk1/nu/vest/2016/Contour/Contour/Parts/DWG/DemoPartR.rbwg	
C\ProgramData\Autodesk\TruNest\2016)Contour\Contour\Contour\Parts\DWG\DemoPart9.dwg	TranslateMAG
C:\ProgramData\Autodesk\TruNest\2016\Contour\Contour\Contour\Parts\DWG\DemoPart10.dwg	
C\ProgramData\Autodesk\TruNest\2016\Contour\Contour\Parts\DWG\DemoPart11.dwg	
CAProgramData\Autodesk\TruNest\2016\Contour\Contour\Parts\DWG\DemoPart12.dwg	
C:\ProgramData\Autodesk\TruNest\2016\Contour\Contour\Parts\DWG\DemoPart13.dwg	
C\ProgramData\Autodesk\TruNest\2016\Contour\Contour\Parts\DWG\DemoPart14.dwg	
C\ProgramData\Autodesk\TruNest\2016\Contour\Contour\Parts\DWG\DemoPart15.dwg	
Total Records: 15 Selected Records: 1 Current Record: 1 Table: selected_cad_files Filter: <none></none>	Can Edit: True Can Insert: False Can Delete: True
Actions Log	(a)
Action: OpenCadFiles, Description: Open Files	
Results: Success	

FIGURE 9: TRUNEST WITH MULTIPLE CAD FILES SELECTED IN THE TRANSLATE WORKSPACE

After selection of the files is completed, the Translate options are now enabled. Depending on the data you're bringing into TruNest, you can select the appropriate option for the universal translator. Once the translation is complete the results are displayed in the graphical workspace. There are other options available to import part data. The node labeled Translate and Compress will apply compression settings on the geometry to reduce the amount of unnecessary points contained in the original geometry.



FIGURE 10: TRANSLATION RESULTS WORKSPACE



Adding Parts

The node labeled Add Parts is the next step in TruNest to go from original CAD data to nesting data. The Add Parts workspace allows the user to customize how the part data is inserting as nesting data. At this point in the process, the user can control what assembly and subassembly each part belongs to, what material is associated to the part, what machine that part is allowed to be manufactured on, and what nesting constraints will be applied to the part. In the Add Parts workspace we have the same Select Files option. This button will open up the same Windows Explorer dialog before, but it will open up to the location of where the results of the translation are stored. The files selected via the Windows Explorer dialog will be inserted into the Add Parts table upon clicking Open.

1					TruNest C	ontour - Add	Parts											- 0 ×
File Admin Tasks Configuration M	lanager	Database Ma	mager File Tra	anslation Part l	Review/Modifi	cation N	lachine Ma	anagement	Opt	imizers	Scheduling	Nest G	eneration	Review Nests				
Automatic Inventory Nesting Part Translation Automatic A	t C Review E ask Set	Drder Schedule Entry Orders	Nest Review															
Navigation 👻	• Work	spaces																
Search	् Trar	nslate 🕂 Ado	Parts															
Þ− 🖬 Utilities (4)	Sele	ection List																Actions
▷				· 🗛 🗸 🗖 🔻													- I	🖙 Select Files
Part Import (5)																	-	Pr. Calant Level 1 Film
Translate		ag a column nead	er and drop it nere to g	group by that column				D400 ¥			<u></u>							Select Level 1 Files
Automat		Assembly T	SubAssembly T	Partname I	Material T	Quantity T	K90 T	K180 T	K270 T	нрт	Orientation T	Mirror I	Deviation T	Increment T	Filter T	Icon I	Prio	🔄 Select Level 2 Files
- * Automat and Compress		Assembly		DEMOPART14		1					0.0000		0.0000	0.1000	>	0	1	+ AddParts
AddParts		Assembly		DEMOPART11			-		-	-	0.0000	-	0.0000	0.1000		0	1	
Þ− ☰ Orders (3)		Assembly		DEMOPART12					-		0.0000		0.0000	0.1000			1	
▶		Assembly		DEMOPART13							0.0000		0.0000	0.1000			1	
		Assembly															1	
<u>1</u>		Assembly		DEMOPART9													1	
		Assembly		DEMOPART10							0.0000		0.0000	0.1000			1	
		Assembly		DEMOPART5			•				0.0000		0.0000	0.1000			1	
		Assembly		DEMOPART6							0.0000		0.0000	0.1000			1	
		Assembly		DEMOPART7			_	_	_		0.0000	-	0.0000	0.1000			1	
]		Assembly		DEMOPART2			-		_	-	0.0000	-	0.0000	0.1000		0	1	
		Assembly		DEMODARTA			-		_	-	0.0000	-	0.0000	0.1000		0	1	
		Assembly		DEMOPARTI			-		-	-	0.0000	-	0.0000	0.1000			1	
			Coloriand Docorr	ter 1 Courses Pe				6 L C	CC.4. T	Care .	Innerste Caluar 🗌 🛛						-	
	Tot	ai Records: 15	Selected Record	IS: I Current Ke		ne pre Elli	er: NUN	e> Can	eone True	Can	inserci raise 1	can Delete	- True					
	Acti	ions Log	C-JEI Di-	Alana Add Ellan														
		Results: Suc	ess	uon: Aud Flies														
5																		

FIGURE 11: ADD PARTS WORKSPACE AFTER IMPORTING TRANSLATED FILES

Once the table appears, the user can begin editing the data about each part. This is a workspace where the Insert, Delete, Copy and Paste function in the tool bar are heavily used. After all edits have been made, selecting the Add Parts button will insert this information into the TruNest Part Assembly. The Part Assembly is a library of all the available part and assembly data ready to be used for nesting.

Automatic Translation

There are two more available options under the Part Import node; Automat and Automat and Compress. These two options merge the Translate and Add Parts steps into one. That means that with one click, TruNest is able to translate the CAD data and automatically insert assembly information,



material information, and nesting constraints into the Part Assembly for each part and each assembly. However, certain file formats do not carry all of the required information to construct the Part Assembly. For these cases, TruNest allows the user to manually define these characteristics in the first step so that they will be carried over.



FIGURE 12: AUTOMAT WORKSPACE WITH IMPORTED FILES

Supported CAD Formats

TruNest supports native data from many various CAD platforms. It will import Inventor Part and Assembly files, Solidworks Assembly files, NX part files and FiberSim data and CATIA CPD and DXF files. It also supports universal CAD types like DXF, DWG, and IGES. TruNest can even read in machine code and legacy nest files in various formats. Having an easy translation process of CAD data closes the gap between design and manufacturing.

Performing an Optimal Nesting Process

Part Assembly Review

The first step in an optimal nesting process is reviewing the part assembly. The part assembly table contains information about the assembly-part relationship, material association, and various nesting



constraints. TruNest provides a split viewport and grid workspace to verify part information and geometry information in the same step. By selecting a record in the table, you can scroll through the records using arrows keys and the display will automatically update based on the record that is currently selected.



FIGURE 13: PART ASSEMBLY SPLIT WORKSPACE INSPECTION

Order Entry

The Order Entry node in the tree is a dedicated workspace to queueing orders. This custom workspaces allows the user to enter in the exact parts, assemblies, and subassemblies that are necessary for the particular job they are trying to fulfill. As you type in the assembly, subassembly, or part name you would like to order, TruNest begins actively filtering on your selection making it easy to select the correct information. After filtering on the selection of parts you want to order, clicking add orders in the Order Details window will populate the queue at the bottom of the workspace for any final editing before scheduling the order.



1		TruNest Contour - Order Ent	у		×
File Admin Tasks Configuration I	Manager Database Manager	File Translation Part Review/Modificati	on Machine Management	Optimizers Scheduling Nest	Generation Review Nests 🔷 📷 👤 😪 🔞
Automatic Inventory Nesting Pa Translation Vesting Pa Defaults Assembly	art Order Schedule Nest y Review Entry Orders Review				
Navigation	Workspaces				
Search	Crder Entry				
▶	Part Filtering				😜 Order Details
▷-	Assembly Filter	SubAssembly Filter	< Part Filter.	r	· Quantity: 1 ⊕
Þ− Sa Part Import (5)	Assembly	SubAssembly	Part	•	Due Date: 12 Nov. 2015
Orders (3)	Demo	A	DEMOPAR	RT1	13-100-2015
- Schedule Orders	Demo	A	DEMOPAR	RT10	Priority: 400 🤤
Active Orders	Demo	A	DEMOPAR		Job Order: JOB
Þ− 🖳 Nests (2)	Demo	A	DEMOPAR		Mat Group: MG
	Demo	A	DEMOPAR	RT13	Facility: ADMIN
	Demo	A	DEMOPAR	RT14	Comment
	Demo	A	DEMOPAR	RT15	
	Demo	A	DEMOPAR	RT2	The Add Order(s)
	Dama		In CRACIERO		<u> </u>
	Active Orders				
		• • 🖶 • 🖾 💌			
	Drag a column header and drop it here	to group by that column			
	Assembly T SubAssembly	T Partname T Quantity T Date	T JobOrder T Priority T Com	nment T MaterialGroup T Facility	T 🔒
	► Demo A	DEMOPART1 1.0000 13-Nov-20	15 JOB 400	MG ADMIN	
	Demo A	DEMOPART10 1.0000 13-Nov-20	15 JOB 400	MG ADMIN	
	Demo A	DEMOPART11 1.0000 13-Nov-20	15 JOB 400	MG ADMIN	
	Demo A	DEMOPART12 1.0000 13-Nov-20	15 JOB 400	MG ADMIN	
	Demo A	DEMOPART13 1.0000 13-Nov-20	15 JOB 400	MG ADMIN	
	Demo A	DEMOPART14 1.0000 13-Nov-20	15 JOB 400	MG ADMIN	
	Demo A	DEMOPARI15 1.0000 13-Nov-20	400 400	MG ADMIN	
	Lemo A	DEMOPART2 1.0000 13-Nov-20	400	MG ADMIN	-
	Total Records: 15 Selected Rec	ords: 1 Current Record: 1 Table: actor	der Filter: <none> Can Edit:</none>	t: True Can Insert: True Can Dele	te: True

FIGURE 14: ORDER ENTRY WORKSPACE

Scheduling Orders

The schedule orders node in the tree is another dedicated workspace to provide the user with a helpful environment to start scheduling queued orders to be nested. Scheduling orders is a process in TruNest that groups all parts and assemblies of like materials and machines. This workspaces is also in charge of assigning dates for the parts to be cut by, estimating how much time it will take to machine the parts, and how much inventory will be used to nest these parts together. By providing this information the user get a sense for how much time an effort may be consumed by producing these parts. The group name and nest prefix fields inside this workspace allow the user to define the tree structure that will contain the selected orders. Once the appropriate orders are selected, the Schedule button will place these orders in a scheduled status and associate the group name and a nest id to the orders and remove them from the previous queue we constructed.



I			Tn	Nest Contour - Sch	hedule Orde	s									×
File Admin Tasks Configuration Ma	nager Dat	abase Manager	File Translation	Part Review/	Modification	Machine	Management	Optimizers	Scheduling	Nest Gen	eration	Review N	lests	^ 🖻	<u> </u>
Automatic Inventory Nesting Part Translation Defaults Assembly R Administrative Tas	Order eview Entry k Set	Schedule Nest Orders Review	,												
Navigation V # W	orkspaces														
Search	🖷 Schedule O	rders													
Þ− 🖬 Utilities (4)	nscheduled 0	rders										Ac	ctions		
Þ− 曼 Database Manager (9)			×	V								G	roup Name:	Domo	
Þ− 🖌 Part Import (5)												- "I "		Demo	
🖌 📰 Orders (3)	Drag a column h	eader and drop it he	e to group by that co	umn									Nest Prefix:	N	_ * >
- 🐺 Order Entry	Facility T	MaterialGroup	Y Material Y M	Machine 🛛 🕅	Jobs T Pa	irts Y Piece	is Y Start Y	Cut Y	Filler T	Status Y	Hours Y	P		📅 Sche	dule
E Schedule Orders		MG	A36 1	PLASMA-ESAB	1 1	15	13-Nov-2015	13-Nov-2015	13-Nov-2015	ACTV	0.5274	<u>a</u>		🖳 Del	ete
Active Orders	ADMIN	MG	A36 1 F	PLASMA-FARLEY-1	1 15	15	13-Nov-2015	13-Nov-2015	13-Nov-2015	ACTV (0.5274	0.			
P 1100 (2)		MG	A30 1 F	LASMA-LIEC	1 1	15	13-Nov-2015	12 New 2015	13-Nov-2015	ACTV I	0.5274	0.			
		MG	A36.1	ASMA-MG-2	1 15	15	13-Nov-2015	13-Nov-2015	13-Nov-2015		0.5274	<u>.</u>			
	ADMIN	MG	A36 1 F	PLASMA-MG-S	1 15	15	13-Nov-2015	13-Nov-2015	13-Nov-2015	ACTV (0.5274	<u>.</u>			
	ADMIN	MG	A36 1 1		1 15	i 15	13-Nov-2015	13-Nov-2015	13-Nov-2015	ACTV (0.5274	0. 🔻			
	-	<u></u>										·			
	Fotal Records:	7 Selected Rec	ords: 1 Current	Record: 1 Tabl	le: ordactv_te	mpforedit	Filter: <none></none>	Can Edit: True	Can Insert	False Ca	n Delete: Fa	alse			
s	cheduled Ord	ers											A	ctions	
			×	T										Forw	ard
	Drag a column h	earder and drop it her	n to group by that col	lumo									-16	Al Pack	uprel
							T (1) 1					n		- Dack	
	Group	1 Nood ADM	y i MaterialGro	up I Material I	JODS	Parts I Pie	ces I Start	5 20 Oct 2011	Filler 1	Status	Hours I	Plates 1	!	髱 Co	РУ
	group_00	1 N004 ADM		A50 1	2	10 17	29-Oct-201	5 29-Oct-201	20 Oct 2015		3.0095	2 2	÷	🕞 Del	ete
	group_00	1 N005 ADM	N MG	A36 1	1	15 15	30-Oct-201	5 30-Oct-201	30-Oct-2015	SCHD		42	1		
	Demo	N001 ADM	N MG	A36 1	2	15 30	01-Oct-201	5 01-Oct-201	10-Nov-201	5 SCHD	0	42	i II.		
	Demo	N002 ADM	N MG	A36 1	1 :	15 15	01-Oct-201	5 01-Oct-201	5 01-Oct-2015	RJCT	0.7774	1	1		
	Demo	N003 ADM	N MG	A36 1	1 :	11 14	01-Oct-201	5 01-Oct-201	5 01-Oct-2015	i RJCT	2.0539	2	1		
	Demo	N003 ADM	N MG	A36 1	1	15 23	01-Oct-201	5 01-Oct-201	01-Oct-2015	SCHD		182	1 -		
	4						NE LA ETTA						<u>}</u>		
	fotal Records: !	9 Selected Rec	ords: 1 Current	Record: 4 Tabl	le: ordschd	Filter: <nc< th=""><th>NE> Can Edit: F</th><th>alse Can Ins</th><th>ert: False Ci</th><th>in Delete: Fa</th><th>lse</th><th></th><th></th><th></th><th></th></nc<>	NE> Can Edit: F	alse Can Ins	ert: False Ci	in Delete: Fa	lse				

FIGURE 15: SCHEDULE ORDERS WORKSPACE

Create Nests

The Create Nests node exists for every group name under the Nests node in the tree. The group names are constructed by the user during the scheduling process. The Create Nests node in the tree opens the designated action workspace which enables the nesting functions. The options available in this workspace are regular nesting, common line nesting, part review, and manual nesting. You can also view the nesting report of any nests that have been completed using the nesting algorithms or manually. Some customized create nests workspaces have special nesting options that run additional optimization routines to further improve how the parts are handled by the machine. Clicking the Yes button will run the selected nests in the table.

TruNest provides the user with an order status that provides information on what state that order is currently in. All orders that have only been scheduled will have a status of SCHD. This lets the user know that nesting hasn't been performed on these nests. Once nested, the status can change to either STAG or RJCT which is a staged or rejected status. This status lets the user know if the nest has reached the efficiency goals setup for the material. From here, the next status is SENT which indicates that the NC code has been sent to the machine. The last status is CUT which is a final state that signifies that nest has been successfully processed by the machine.



TruNest Contour - Create Nests	×
File Admin Tasks Configuration Manager Database Manager File Translation Part Review/Modification Machine Management Optimizers Scheduling Nest Generation Review Nests	^ 🗟 💄 × 📀
Image: Constraint System Part Image: Constraint System Image: Constraint System Automatic Inventory Nesting Part Order Schedule Nest Defaults Assembly Review Order Schedule Nest Review Order Schedule Nest	
Administrative lask bet	
Nargation v 3 workpace	
► Tublises (4)	
D = 2 Database Manager (9)	Actions
▶ ▲ Part Import (5)	- Yes
Drag a column header and drop it here to group by that column	FL MinPir
Group T Nest T Material T MaterialGroup T Facility T Machine T EstPlt T Hours T Status T MinDate T MaxDate T	Shared
▲ 🕏 Demo (6) ► Demo N001 A36 1 MG ADMIN PLASMA-55A8 43 0.7774 SCHD/SCHD 01-0ct-2015 10-Nov-2015	
University Demo N002 A36 1 MiG ADMIN PLASMA-FARLEY-1 43 0.7774 RJCT/RJCT 01-Oct-2015 01-Oct-2015	Report
2 Manage Nets Demo N003 A36 1 MG ADMIN PLASMA-LTEC 185 3.3869 STAG/RUCT 01-Oct-2015 01-Oct-2015	💑 Parts
P 23 NU01 (6) Demo N005 A36 1 MG ADMIN PLASMA-FARLEY-1 42 0.0000 SCHD/SCHD 10-Nov-2015	TruEDIT
> 30,0005(5)	
▶ 😰 group.001(4)	
Total Records 4 Selected Records 1 Current Records 1 Table scholid Filter CNONES Can Edit Fake Can Insent Fake	

FIGURE 16: CREATE NESTS WORKSPACE

Manage Nests

The Manage Nests node also exists for every group and is located just below the Create Nests node. This workspace is only populated with records once the orders have been nested using the Create Nests node. The Manage Nests workspace is an actions workspace that executes post nesting processes. From this table populated in the grid, the user can see what status each nest is in. The user can also see how many plates, or sheets of material, were used by the nesting system to fit all the parts that were ordered. Some of the available actions in the workspace include status manipulation, post processing, and report generation. TruNest has a vast post processor library to suit the needs of the configuration. It also support generic outputs of nesting like DXF format. The back plot function is a useful tool that re-interprets the NC code into graphical form to allow the inspection of what processes will be run by the machine.



I					1	TruNest Conto	ur - Manage Nests												×
File Admin Tasks Configuration N	lanage	r Data	ibase Mar	ager	File Translatio	n Part Re	view/Modification	Machin	e Management	Optimize	rs Sc	heduling	Nest Ge	eneration	Review N	lests			1 ~ 🥝
Automatic Inventory Nesting Pai Translation Defaults Assembly Administrative T	rt 1 Review Fask Se	Order S v Entry	3 3 Schedule Orders	Nest Review															
Navigation 👻 🖡	Works	paces	_																
Search	E M	lanage Nes	ts																
Þ− 📼 Utilities (4)	Sele	ction List															Actio	ns	
Database Manager (9)			th. 🔝	2 D														Sched	de â
P = * Part Import (5)																	-	Calant	5 L
Orders (3)		g a column h	cader and c	srop it here t	o group by that	column"												Select	21
 Demo (6) 		Group T	Nest T	Plate T	Quantity T	Material T	MaterialGroup T	Facility T	Machine T	Nst T	Iru T	RemL T	RemW T	RemA T	Status T	Machine		Reject	
Create Nests	Ľ	Demo	N001	001	1	A30 1 A36 1	MG	ADMIN	PLASMA-ESAD	40.5683	40,4583	165	90	0	RICT	5079	•		
Manage Nests		Demo	N003	001		A36.1		ADMIN	PLASMA-LTEC	88,5230	88.5230				STAG	5046			
4 💀 N001 (6)		Demo								67.3338								Ni-D	51.
- J. Optimize Nests		Demo								50.6772								INCREV	51.
Part List																		TimeG	en
- Plate List																		DXFou	
- Report																	5		
4- 💀 N001_001 (3)																		C	51.
- 📼 Orders																		Cut	21.
— 🔜 Nc Code																	2	MinPir	21.
Report																	5		
Þ- ₩ N002 (6)																			ot
D = M N005 (6)																		Plot	51.
▷ 10 group 001 (4)																			51.
																		Print	21
	Tota																4		
	Actio	ns Log																	

FIGURE 17: MANAGE NESTS WORKSPACE

Optimization

Optimization of nesting and post-processing allows users to go from the nesting system to the shop floor without a headache. TruNest provides many different optimization techniques that allow easy tooling and cutter optimization for the type of machine defined.

1		TruNe	t Contour - A	iutomatic Tab	sing									o x
File Admin Tasks Configuration Mar	nager Database Manager	File Translation	Part Revie	w/Modificatio	n Machir	e Managemer	nt Optimi	izers Sche	duling N	lest Generati	on Review	Nests	~ 🗈 👤	~ (2)
Automatic Inventory Nesting Part Translation Defaults Assembly Re Administrative Tasl	Order Schedule Nes eview Entry Orders Revie sk Set													
Navination • • • W	forkspaces													
Search.	Automatic Tabbing	ld Tabbing 🛛 💦 Shee	cutting	Minimum Pie	rcing 📑 Bri	dge Cutting	Automatic	c Rivets						
Þ− 🖬 Utilities (4)			,											
🖛 😸 Database Manager (9)														
- 🖧 Part Assembly	Drag a column header and drop it h													
- 😂 Nesting Defaults	Material T Machine T	Rule T Contour T	Holes T	Lines T Arc	i T Ends T	EndType T	MinTabs T	MaxTabs T	SegTabs T	TabSize T	MinSpace T	MinSegment T	MinPLen T	Mi
 Inventory 	PLASMA-MG	1				End	4	12	3	0.1500	3.0000	1.0000	1.0000	11
- J Auto Leadin Data	 PLASMA-MG 	2 🔣		N 1		End				0.1500	3.0000	1.0000	1.0000	10
- Clamps	 PLASMA-MG 	3				End				0.1500	7.0000	3.5000	1.0000	u
Machine Management (7)	 PLASMA-MG 	4 🗷	-		-	End				0.1500	5.0000	1.0000	1.0000	u
Þ- 😸 Admin Manager (11)	 PLASMA-MG 	5				End				0.1500	2.0000	1.0000	1.0000	10
Optimizer Manager (6)	 PLASMA-MG 	6				End				0.1500	4.0000	1.0000	1.0000	u
Nutrit Tablies	 PLASMA-MG 	7	-			End				0.1500	4.0000	1.0000	1.0000	и
- P Sheetcutting	 PLASMA-MG 	8	-			End	6			0.1500	4.0000	1.0000	1.0000	u
- D Minimum Piercing	 PLASMA-MG 	9				End				0.1500	2.0000	2.0000	5.0000	u
Bridge Cutting	PLASMA-MG	10	-		-	End	8	25		0.1500	9.0000	2.0000	1,0000	u
Automatic Rivets	PLASMA-MG	11	-			End	8	25		0.1500	40000	2.0000	1,0000	ш
P = Additional Tables (44)	PLASMA-MG	12				End	8	25		0.1500	4,0000	2.0000	10000	ш
D- ", Part Import (5)	- PLASMA-MG	13	-			End				0.1500	30000	2.0000	1,0000	11
P−	PLASMA-MO	15	-			End				0.1500	40000	10000	10000	14
Þ <u>₽1</u> Nests (2)	* PLASMA-MG	15				End	12	30		0.1500	50000	1,0000	10000	11
	* PLASMA-MG	17				End	12	30		0.1500	50000	1,0000	1,0000	10
	PLASMA-MG	18				End	12	30		0.1500	50000	10000	10000	10
	* PLASMA-MG	19	-		-	End				0.1500	40000	15,0000	1,0000	10
	* PLASMA-MG	20				End				0.1500	9,0000	1,0000	1,0000	10
	* PLASMA-MG	21			-	End	8			0.1500	1.0000	2.0000	1.0000	10
			_	_	_	_	_	-						
1	Total Records: 21 Selected R	ecords: 1 Current	Record: 1	Table: autotal	Filter: <n< th=""><th>IONE> Ca</th><th>n Edit: True</th><th>Can Insert: Ti</th><th>rue 🛛 Can D</th><th>elete: True</th><th></th><th></th><th></th><th><u> </u></th></n<>	IONE> Ca	n Edit: True	Can Insert: Ti	rue 🛛 Can D	elete: True				<u> </u>

FIGURE 18: OPTIMIZATION TABLES (AUTOMATIC TABBING SHOWN)



Automatic Tabbing

Automatic Tabbing is an optimization routine that places tabs of varying types around the nested parts in order to hold the parts to the material skeleton as they are being processed by the machine. Some of the types of tabs are skin tabs which are a very thin tab that breaks very easily and hold down tabs which are tabs that are bigger in order to make sure the part doesn't break free from the skeleton without a secondary process to remove the tabs. Tabbing is commonly used on punch presses, routers, laser cutters, and water jet machine tools.

Automatic Riveting

Automatic Rivets is an optimization tool that places ideal rivets locations within the nest. The rivets locations are used by the machine tool, typically a routing machine, tool allow multiple sheets of material to be stacked together. A drill tool is used at each rivet location to pierce through all of the sheets of material in order for the machine tool operator to place a rivet in that location. The rivets prevent the different sheets of material from sliding out of places when cutting the parts.

Sheet Cutting

Sheet Cutting is an optimization routine that instructs the machine tool to cut the nest skeleton (material left over after parts are cut) into smaller pieces that are easy to handle by the machine tool operators. This is especially useful when cutting large sheets of material or thick (heavy plate) materials.

Minimum Piercing Logic

Minimum Pierce logic is a routine that optimizes the cutting path of the machine so that it minimizes the amount of times the machine needs to perform a pierce cycle. A pierce cycle is when the cutting machine piercing though a portion of the material in order to be able to cut a part. This cycle takes more time than standard cutting of the parts and also uses a larger footprint on the material than the kerf of the cutting tool. Minimizing the number of pierces of the material during the cutting process allows more throughput of nests and more material savings. Pierce cycles are standard processes for gas and plasma cutting machines.

Head Down Logic

Head Down logic is a routine that optimizes the cutting path of the machine to keep the head or tool cutting material as much as possible. This routine optimizes the cutting path and off-part motion of the machine from part to part.

Bridge Cutting

Bridge cutting is a routine that inserts a special bridge between parts. This optimization technique joins contours of parts into one so that the machine tool can cut multiple parts with the same path.

Chain Cutting

Chain cutting is a routine that optimizes the first and last segment of parts in order to optimize the cutting path of the machine. This routine is used for parts that do not have any internal contours.





FIGURE 19: NEST WITH HEAD DOWN OPTIMIZATION PERFORMED

Special Features

TruQuote

TruQuote is a special feature within the TruNest interface that provides a very specific type of nesting. TruQuote is a feature developed to nest single parts as efficiently as possible within the specified material constraints. This is very useful when nesting to produce progressive part dies. This system will also generate a quote based on cost information to produce the die that is generated by the software. TruQuote can also produce dies with multiple parts, but the speed at which the die is calculated is significantly increased as more parts are added.

Vault Add-in

Autodesk Vault is a product where you can organize all your files and keep them in one location for easy access. All file versions are retained, so you never misplace or replace past versions. The vault stores each version of a file, along with all the files dependencies, giving you a living history of the project as you work on it. The vault also stores file properties for rapid searching and retrieving. TruNest uses Vault as an add-in to retrieve part and assembly files locally to import the information into the nesting system. TruNest does not need to update revisions or checkout parts because it only uses a read-only copy of the file.

ODBC Connectivity

TruNest supports access to either a standalone database in the standalone version or access to a master SQL Server database or Oracle Server database in the enterprise version. The enterprise version connects to the master databases through an ODBC (online database connection). An enterprise version



allows a customer to use multi-user, simultaneous access into TruNest. This is highly effective for companies with multiple levels of users that need to access information in the system at the same time.

Highly Configurable

TruNest is a highly customizable product. Each user and user type can be customized to serve a specific function. TruNest provides functionality to customize read/write access of information, tree and ribbon structure and icons, user and group privileges, and even interface themes. These customizations provide an optimized workflow and interface friendliness.

Summary

Autodesk TruNest is a product that provides an end to end solution for nesting. On the front end, TruNest interfaces with PLM systems and ERP/MRP systems to optimize input data and scheduling of job orders. On the back end, TruNest optimizes machine processes and integration completing the entire workflow from the front office to manufacturing within the same product.



